

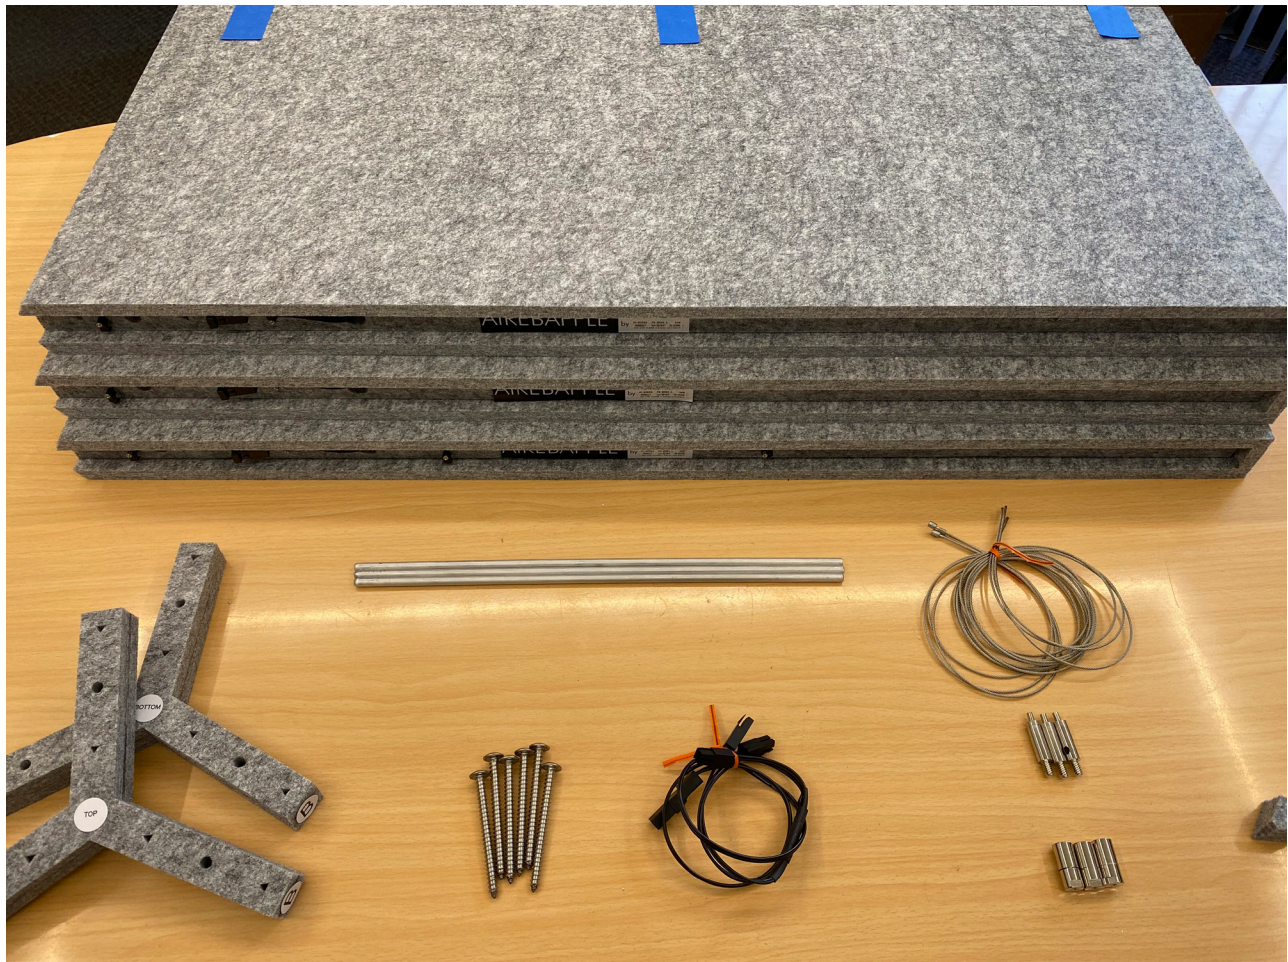



PART LIST

DESCRIPTION	QTY
Airebaffle™ (36" x16")	3 (A, B, C)
Y brackets	2 (Labeled TOP, BOTTOM)
1/4" aluminum rod (14")	3
#14 screw (3")	6
Electrical harness	1
Hanging hardware adjustable	3
Hanging hardware upper deck	3
1/16" cables (4')	3
Triangle plug	1

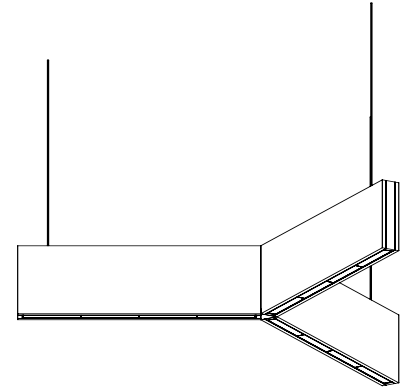


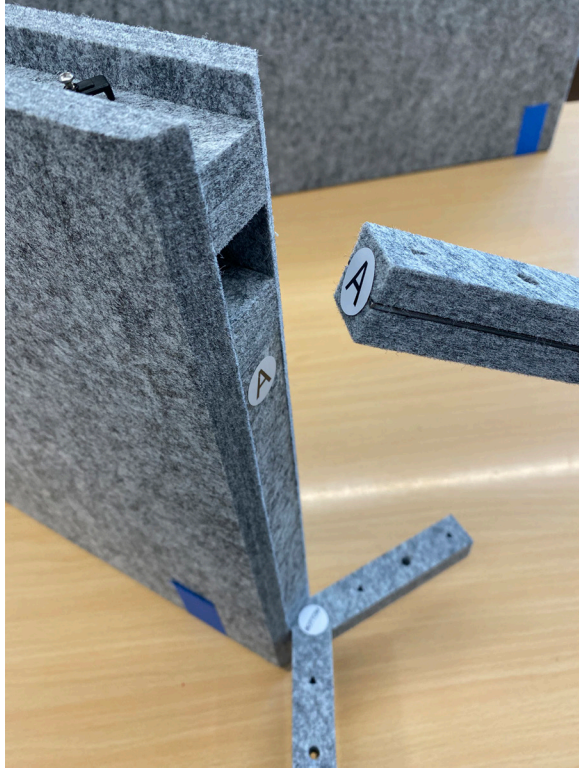

1) Place the Y brackets into the Airebaffle™. Using proper allocation letters (A to A, B to B, C to C) and (TOP, BOTTOM) X3

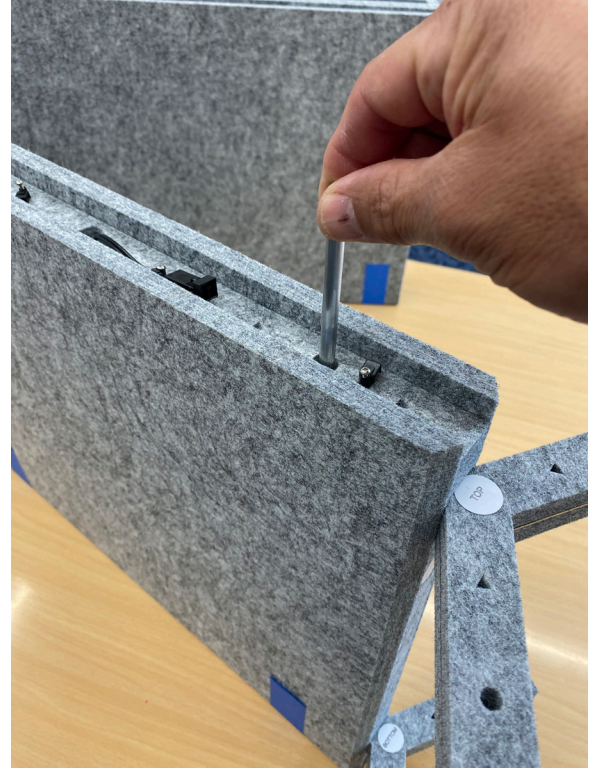

2) Insert 1/4" aluminum rod into Airebaffle™ with tapered end down until flush. (x3)

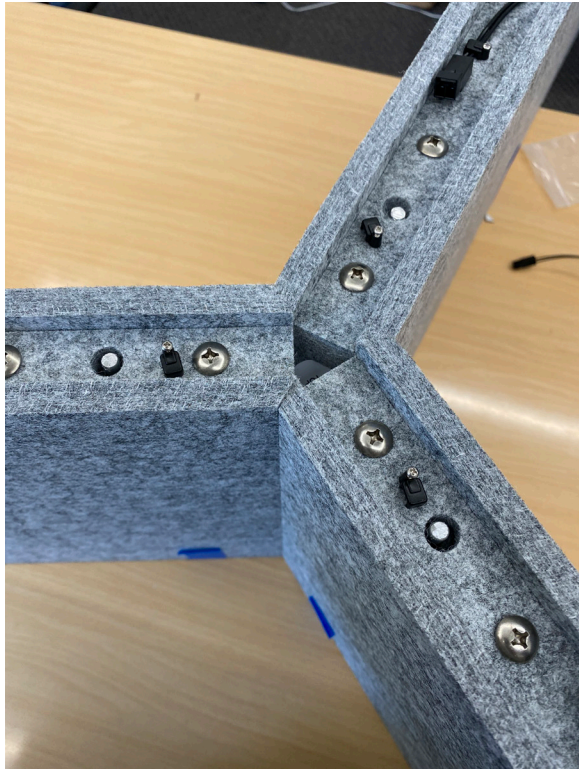

3) Drive #14 screw into top of Airebaffle™. (x6)




4) Connect harness to mating connectors with the main pigtail ending on Airebaffle™ "A".



5) Fasten cable holders ensuring harnesses are secure.



6) Attach the 1/4-20 male cable adjuster onto each Airebaffle™ (x3)

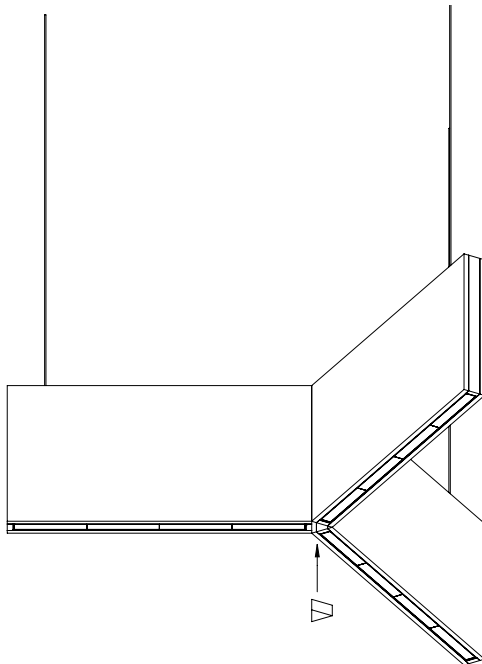

7) With the fixture suspended, insert the felt triangle plug into the center opening.